

FAQs

Does it need planning permission?

The Secure-A-Bike Garage is not a permanent structure therefore it needs no planning permission. However, if you intend to install the Secure-A-Bike unit in the front garden, it would be in your own interest to contact your local planning department to confirm that you are not contravening any local planning laws.

If I move can I take it with me?

Yes! It will take about an hour to disassemble and about an hour and a half to reassemble. You will need a friend to help you; it takes two people to handle the panels. We had one customer who moved his three times in one year.

What does it weigh?

The Racer weighs a third of a Ton and the Heritage weighs a half of a Ton fully assembled.

Will it effect my insurance?

Yes! The Secure-A-Bike Garage is the only Q class product that has ever been given a certificate of compliance by Thatcham. All insurance companies recognise it as a secure garage even those who specify a brick garage. Many of the companies also recognise it as an additional security device and a ground anchor.

How long is it with the ramp fully extended?

With the trolley extended, the total length of the unit is 3m.

Do I need a side or centre stand?

No! You don't need any kind of stand. The bike is held securely in the wheel clamp. The front wheel sits snugly into the clamp and is held by the tyre. The motorbike is kept solidly upright preventing accidental damage.

Will it suffer from condensation?

The Secure-A-Bike has sixteen air vents giving natural convection. This helps combat condensation. Some customers have added thin polystyrene sheets to the side panels or have added a low voltage greenhouse radiator to keep their bikes warm and free from condensation.

What kind of surface do I need?

You will need a good hard flat and level surface (e.g. stone slabs, tarmac etc.) Concrete is best as you can rawl bolt the unit down. Please remember the more level the surface is, the easier assembly will be.

A Lifetime of Security, Protection and Storage for your motorbike



Secure-A-Bike

- ✓ Unique sliding trolley and wheel clamp
- ✓ 6 lever 4 pin deadlocks
- ✓ 5 sizes
- ✓ Fully tested by Thatcham
- ✓ Galvanised steel
- ✓ Polyester powder coated
- ✓ Insurance recognised



Excellent value

Model	Price
Racer	£1,885.00
Racer Plus Xtra height	£2,190.00
Racer Plus Xtra length	£2,190.00
Racer Plus Xtra height and length	£2,350.00
Heritage	£2,450.00
Quad	£1,785.00

All prices include VAT. Short trolley as standard. Standard colour of Moss Green Ral 6005.

Delivery and build up extra, typical delivery £100 and build up £50. However we have a special offer with free delivery and build up in most areas.

Prices as from 3/5/2011 and include vat at 20%

Eurosecure Ltd

18 Uppergate
Hepworth
Holmfirth
West Yorkshire
HD9 1TG

www.secure-a-bike.com
sales@secure-a-bike.com
Tel: 07979 968 655



eurosecure

Why Secure-A-Bike?

Construction

The Secure-A-Bike is manufactured from galvanised sheet steel panels. The sheet is blanked out using CNC laser cutting machinery and folded into very strong panels using CNC press brakes. The latest technology is used to provide consistently accurate fabrications for our customers. All edges are 'returned' to provide strength and make all panel to panel joints secure from ingress by other tools or water.

Doors are reinforced for strength and to prevent tampering with the robust locking devices, again all edges are 'returned' for safety and security.


Support Tray

The support tray is fabricated from 2.5mm sheet steel folded to a strong rigid shape providing a central runway for the bike wheels. The front wheel clamp holds the front wheel so the centre/side stands are not required. The motorbike can be locked onto the front wheel clamp using a conventional 'U' bolt. The short trolley has proven to be preferred by 85% of customers due to the smaller area required when siting the unit and the improved manoeuvrability when disengaging the motorcycle, so the short trolley has become the standard. The tray runs on high quality needle bearing rollers, which need little or no maintenance.



Fittings

The lock is a 6 lever 4 pin deadlock. The lock cylinder is drill and pick proof and all the pins are manufactured from hardened steel. Added dead bolts are of a similar construction. All securing bolts are 'secure head' fixings needing specialist tools to remove them. Hinges are heavy duty 'dogged' with additional strengthening and are welded directly to the main construction. Heavy duty fastenings are used throughout to secure all of the panels.

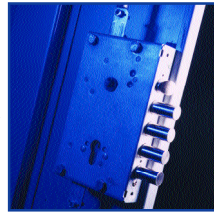

Finish

Special colours can be provided. The standard colour is dark green. The tough and durable polyester powder coating provides excellent chemical resistance and mechanical properties, with hard durable finishes giving good resistance to light and weather. They are the recommended standard for exterior finishes.

The Secure-A-Bike has been ergonomically designed, for the convenient and speedy operational use by the motorcycle user. The rider can have his motorcycle locked away safe and secure in under a minute.

The Secure-A-Bike has a Patent application no 9908095.4. The design is under constant review in the pursuit of excellence. We have a policy of continuous development and therefore reserve the right to modify designs and specifications without prior notice.

Reduce your bike insurance

One of the main benefits of the Secure-A-Bike garage is the benefit of lower insurance premiums. Thatcham have issued a certificate of compliance for the Secure-A-Bike garage. The major insurers now all recognise the Secure-A-Bike as an acceptable mechanical security device and as a secure garage. We are currently negotiating with most insurance companies to have them recognise the Secure-A-Bike garage as having an even higher security rating.

Will it fit?

There are five standard sizes for the Secure-A-Bike.

		w	h	l
Racer	Exterior	1100	1525	2440
	Interior	940	1375	2400
RacerPlus	Exterior	1100	1725	2440
Xtra height	Interior	940	1575	2400
Xtra length	Exterior	1100	1525	2625
	Interior	940	1375	2585
Xtra height and length	Exterior	1100	1725	2625
	Interior	940	1575	2585
Heritage	Exterior	1200	1872	2844
	Interior	1040	1642	2797
Quad (no trolley)	Exterior	1354	1405	2200
	Interior	1230	1295	2090

Please note: A level hard standing base is required for all of the above. All dimensions are in millimetres.

Secure-A-Bike : Order form

Customer name: _____

Address: _____

Postcode: _____

Telephone: _____

Model required: _____

Type of bike: _____

To order we require a deposit of £200 and the balance upon receipt of the unit. We normally deliver within 28 days of the order being placed, but invariably in a much shorter time span.